# **NK-15 Voltage Conversion**

Dual voltage design allows our heavy duty, high head single phase to operate at 110v or 220v. The following explains how to convert from one voltage to the other.







## STEP 1:

Remove the bolts separating the motor head cover from the pump casing.



## **STEP 2:**

- -Gently twist the motor head cover and remove the cover in order to protect the contents inside.
- -Take care not to damage the centrifugal switch and its wiring.






#### **STEP 3:**


As seen in the photograph, there is a small diagram that shows where the connections should be positioned for 110V or 220V operation.



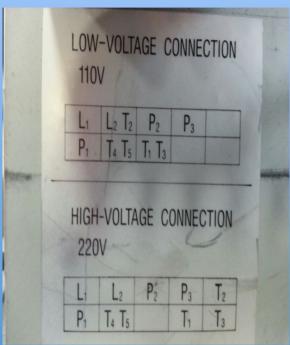

## STEP 4:

- Remove the plastic cover.
- With a screwdriver remove the leads and connect per the diagram.

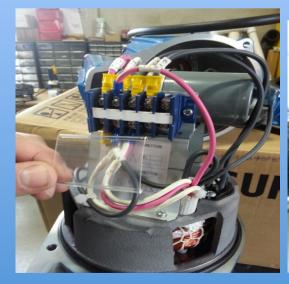





## **STEP 5:**

- On the left a 110V connection.
- On the righ a 220V connection.



### **STEP 6:**

- -Re-attach the pump casing taking care not to pinch the wires.
- Be sure the o-ring in seated properly.
- -Torque bolts to 11ft lbs.

